




**BACKSAFE**  
australia

# Assembly Instructions

## STURGO® Platform Trolley - Model 12420007

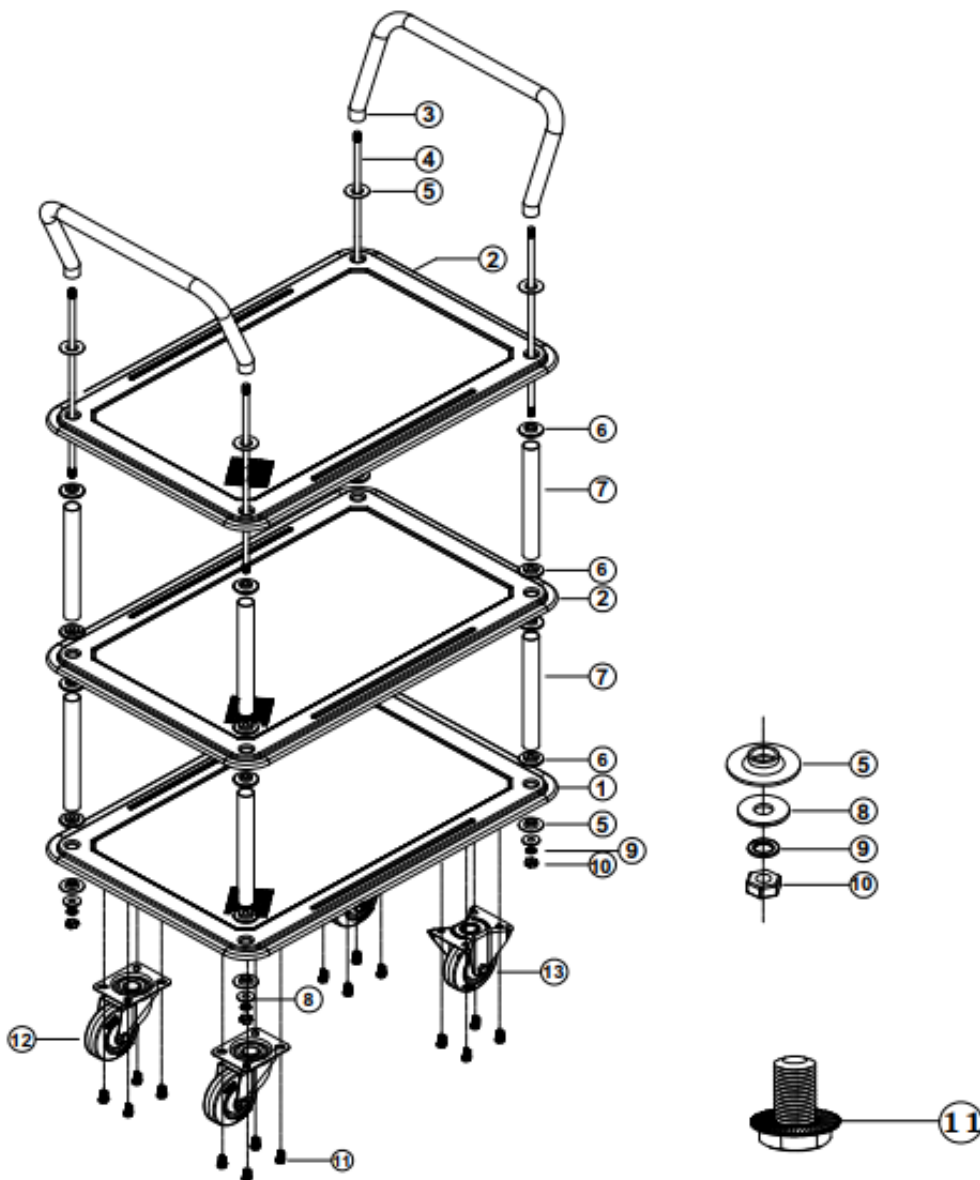



**BACKSAFE**  
australia

NO.	DESCRIPTION	QTY
1	PLATFORM	1
2	PLATFORM	2
3	GRIP HANDLE	2
4	SCREW ROD	4
5	WASHER SUPPORT	8
6	PLASTIC LINER	16
7	TUBE	8
8	WASHER	4
9	SPRING WASHER	4
10	NUT	4
11	BOLT FLANGE	16
12	SWIVAL WHEEL	2
13	FIXED WHEEL	2